

Trailer Brake System Treatment Procedure



Check the piping.
Purge all tanks, when they empty close their valves.




Make sure all valves on the INJECT-AIR are shut.




Connect the INJECT-AIR's entry glad hand to the tractor's trailer air supply line (red).

Connect delivery glad hand to the Trailer's air supply line (red) or to the garage's compressor

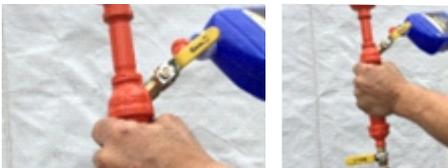

Incorporate 50 mL ALD-3 treatment fluid in the INJECT-AIR's fluid reserve and shut the reserve valve. See page 2 for recommended dosage.

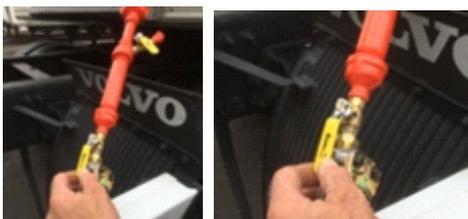


Slowly open the INJECT-AIR's air control valve and charge air system for approximately 2 minutes then close the control valve.

INJECT-AIR

User Guide



After treatment, walk around trailer for inspection. If it's leaking you will see white bubbles from piping. Close main valve, drain the tanks.

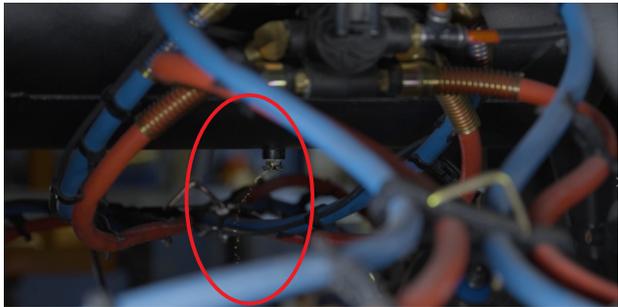

Drain the tanks (repeat if necessary) and disconnect glad hand from INJECT-AIR.



Scan for video instructions.

Product Code: ACC537RA



Recommended dosage at each maintenance service:

Simple axle	1 x 50 mL = 50 mL	2 axles	2 x 50 mL = 100 mL
3 axles	3 x 50 mL = 150 mL	4 axles	4 x 50 mL = 200 mL

Disclaimer

Manufacturer is not responsible for any and all damages resulting from the use of the INJECT-AIR.

Manufacturer is not responsible for any and all personal injury resulting from the use of the INJECT-AIR.

Safety warning

We recommend the use of safety goggles and protective visor to protect face and eyes of operator. Always use the INJECT-AIR in a safe manner preventing internal ALD-3 spillage towards humans, animals, and any other potentially hazardous area in workplace. Inquire on flammability of ALD-3 treatment used to manage the product safely and adequately around treated vehicles especially if other maintenance interventions are required around air tanks and other components of the air systems. All maintenance personnel should be trained on required safety precautions in accordance with ALD-3 treatment present in the vehicles to prevent personal injuries and fire hazard. See technical data sheet and safety data sheet of PROLAB ALD-3: www.prolab-technologies.com

Warranty

The INJECT-AIR is guaranteed to be free of manufacturing defects for one (1) year from purchase date. Any defects resulting from improper initial assembly or from using water, corrosive chemicals, non-alcohol or non-methanol based treatment fluids are not warranted.

Tech support: info@prolab-technologies.com